



Acadia 42 in. Fire Pit Kit Installation Instructions

Congratulations on your purchase of the Acadia 42 in. Fire Pit Kit. Before you begin, please refer to the parts list to ensure all materials needed for assembly have been received. Also, review the Warning Statement and Operating Instructions prior to starting installation.

Parts Included with this Product

Item	Quantity	Description
A.	24	Decorative Fire Pit Block
B.	1	Heat Treated Fire Pit Bowl
C.	1	Ember Screen
D.	1	Handle
E.	1	Grate
F.	1	Wooden Handle Poker

Read each step thoroughly prior to installing:



Step 1

- Choose a clear, flat area - 42" x 42" - free of overhanging branches and other flammable material.



Step 2

- To form the first row, lay each segment down to complete a circle. Blocks should be tight and level.



Step 3

- Place the second layer on top of the first, making sure to alternate the pattern. The seam of the blocks below should be in the center of the block above.



Step 4

- Repeat the third step, placing the third layer on top of the second, making sure to alternate the pattern.




Step 5

- Place (Item B) the Fire Pit Bowl on top of the third row so it is evenly spaced and flat on the surface.



Step 6

- Place (Item E) Grate in the bottom of (Item B) Fire Pit Bowl, then set (Item C) Ember Screen on rim of (Item B) Fire Pit Bowl.

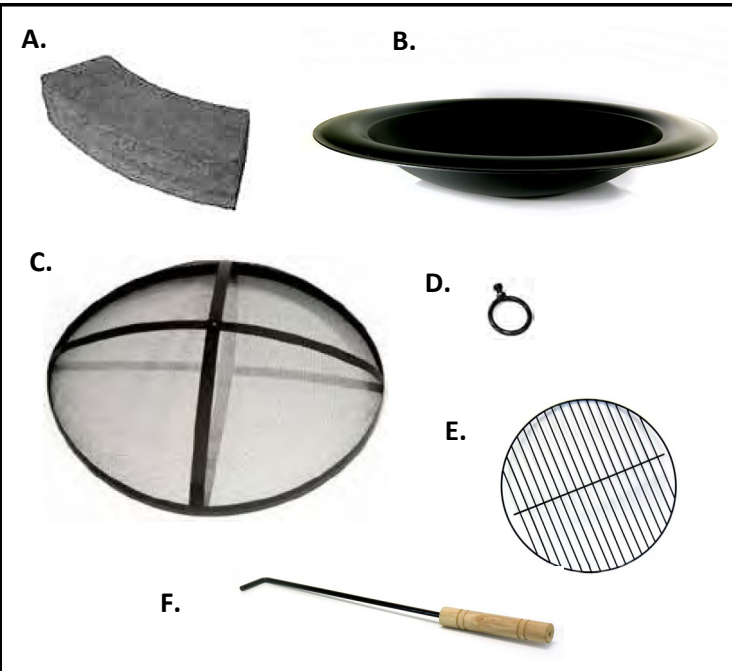

Tools Required

- Tape Measure

No Additional Materials or Tools are Required.



Acadia 42 in. Fire Pit Kit

WARNING Statement



The following Warning Statements must be reviewed and followed to avoid injury or property damage. Save these instructions for future reference. If you are installing and assembling this unit for someone else, give these instructions to them to read and save for future reference.



- ⇒ **For Outdoor Use Only**
- ⇒ **Improper installation, adjustment, alteration service or maintenance can cause injury or property damage.**
- ⇒ **Read the installation, operation and use and care instructions thoroughly before installing or servicing this equipment.**

- This appliance is for outdoor use only, and shall NOT be used in a building, garage, or any other enclosed area.
- Do NOT use this outdoor fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- This outdoor fire pit is NOT for commercial use.
- This outdoor fire pit is NOT to be operated by children.
- This outdoor fire pit is NOT to be used in or on boats or recreational vehicles.
- Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
- When using this outdoor fire pit, exercise the same precautions you would with any open fire.
- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this outdoor fire pit.
- Do NOT use this outdoor fire pit without reading the entire "Installation", "Warning Statements", "Operating and Use and Care" instructions.
- This outdoor fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely, and create less smoke.
- Do NOT burn charcoal briquets, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw embers.
- Do NOT alter this outdoor fire pit in any manner.
- Do NOT use this outdoor fire pit until it is COMPLETELY assembled.
- Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
- Do NOT store or use an LP gas cylinder within 15 feet (4.6 m) of this outdoor fire pit while it is in operation.
- Do NOT use this outdoor fire pit near automobiles, trucks, vans or recreational vehicles.
- Do NOT use in an explosive atmosphere. Keep outdoor fire pit area clear and free from combustible materials, gasoline and other flammable liquids.
- Do NOT use this outdoor fire pit under any overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
- Always use this outdoor fire pit on a hard, level non-combustible surface such a concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
- Always empty this outdoor fire pit before each use. Leave a thin layer of ash to protect the bottom.
- Do NOT wear flammable or loose clothing when operating this outdoor fire pit.
- Do NOT use in windy conditions.
- Do NOT use this outdoor fire pit unless ember guard is securely in place.



Acadia 42 in. Fire Pit Kit WARNING Statement (Continued)



- Do NOT use gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light or relight fires.
- Keep all electrical cords away from a hot fire pit.
- All surfaces of this outdoor fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (Potholders, gloves, BBQ mittens, hot pads & etc.). Never touch ashes or coals to see if they are hot.
- Do NOT leave a lit outdoor fire pit unattended, especially around children and pets.
- Do NOT attempt to move or store this outdoor fire pit until all ashes and coals are completely extinguished.
- Do NOT remove ashes or coals until they are completely and fully extinguished.
- Use heat-resistant gloves or hot pads when contacting handles.
- Use long, sturdy fire pit tools when adding or moving logs.
- Do NOT place wood directly into bottom of the outdoor fire pit. Place wood only on the wood grate.
- Do NOT overload the fire pit. Do not add additional firewood until the fire burns down. NOTICE: If any portion of the bowl, lid or ember guard of this outdoor fire pit are glowing red it is overloaded.
- Do NOT lean over this outdoor fire pit when lighting or when in use.
- Do NOT place a hot ember guard or hot fire pit tools onto combustible surfaces such as grass, wooden deck or furniture.
- Avoid breathing smoke from the fire and avoid getting it into your eyes.
- This outdoor fire pit should be thoroughly inspected and cleaned on a regular basis.
- After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and/or cleanup are executed.

**Death, serious injury or damage to
property may occur if the information is
not followed.**



Acadia 42 in. Fire Pit Kit

Operating and Use and Care Instructions

The following Operating and Use and Care instructions must be reviewed and followed to avoid injury or property damage. Save these instructions for future reference. If you are installing and assembling this unit for someone else, give these instructions to them to read and save for future reference.



Before using this outdoor fire pit, make sure you have read, understand, and are following all information provided in the important safeguards and warning statements on page 2 & 3. Failure to follow those instructions can cause death, serious injury or property damage.

Lighting

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or natural fire starter onto the center of the grate.
3. Place above that layer dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the bowl.
4. Use a match to light kindling or fire starter.
5. Replace ember screen by using the fire poker tool.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

Reminders:

- *Always wear protective gloves or a potholder when tending to the fire.*
 - *Wait until glowing coals have developed before adding any additional wood.*
 - *Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.*
1. Carefully remove ember screen by using fire poker tool.
 2. While using fire poker tool, shift coals and logs to allow additional airflow.
 3. If additional wood is required, place wood on top of coals. Be careful, not to disturb ashes.
 4. Replace ember screen by using fire poker tool.

Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as it is dangerous and can cause damage to this outdoor fire pit or yourself.

Care and Inspecting

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

- ***Do NOT attempt to inspect this fire pit until the fire is completely out.***
1. Check handles to make sure they are secure.
 2. Check components for any signs of damage or rust.
 3. If damage to any components is detected, do NOT operate until repairs are executed.

Cleaning

This outdoor fire pit should be cleaned on a regular basis to promote safer experiences and longer product life. *Note: After repeat use, a slight discoloration of the finish may occur.*

- ***Do NOT attempt to clean this outdoor fire pit until the fire is completely out.***
 - ***Do NOT use oven cleaner or abrasive cleaners as they will damage this product.***
 - ***Do NOT clean any part of this outdoor fire pit in a self cleaning oven as it will damage the finish.***
1. Wipe exterior surfaces with a mild dish soap or baking soda.
 2. For stubborn stains use a citrus based degreaser and a nylon scrubbing brush.
 3. Rinse clean with water.
 4. Remove built-up creosote from components with a chimney cleaning product.

Storage

- ***Do NOT move or store this outdoor fire pit until the fire is completely out.***
1. Once the fire is out, coals are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
 2. Store assembled in a location away from children and pets.